


1 Product introduction

This product is EB-16-R and EB-17-R infrared remote control access controller. The product design has many functions such as distance sensing, delay, remote unlocking(inching, self-locking, learning and clearing), and can be selected by itself.

specifications

	EB-16-R		EB-17-R
Dimensions	115 X 70 X 25mm	Dimensions	86 X 86 X 35mm
Standard Structure	Stainless steel Panel, Steel Button	Standard Structure	Stainless steel Panel, Steel Button
Current Rating	3A,36VDC Max	Current Rating	3A,36VDC Max
Output Contact	+12V GND NO NC COM	Output Contact	+12V GND NO NC COM
Mechanical Life	1000000 tested	Mechanical Life	1000000 tested
Suitable for Door	Hollow Door	Suitable for Door	Hollow Door
Operating temp	-10°C ~ 55°C (14°F-131°F)	Operating temp	-10°C ~ 55°C (14°F-131°F)
Operating Humidity	0-95% (non- condensing)	Operating Humidity	0-95% (non- condensing)
Detection range	0.1-10cm	Detection range	0.1-10cm
LED Indicator		LED Indicator	
White LED indicator	Power OFF	White LED indicator	Power OFF
Blue LED indicator	Power ON(standby)	Blue LED indicator	Power ON(standby)
Red LED indicator	Power ON(sensation)	Red LED indicator	Power ON(sensation)
Weight	0.25kg	Weight	0.25kg
Standard Packing	70pcs	Standard Packing	70pcs

wiring diagram

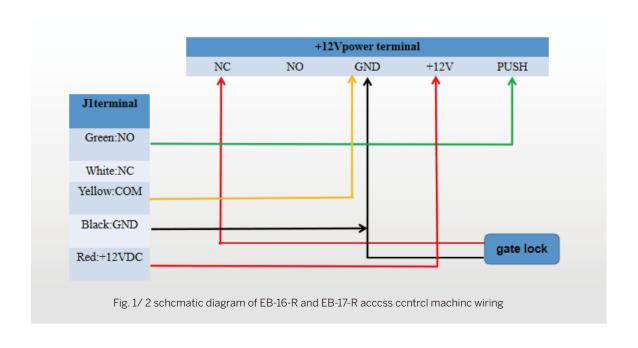

Technical parameters

Operating voltage	DC12V	
Standby current	<=50mA	
433 Remote control distance of remote controller	> 15 m	
Storage capacity	30 users	
Unlock delay time	<=30 seconds adjustable	
Sensing distance	5~20cm	
Overall dimension	86-86-26mm	

functional operation

Note: after the power is turned on, the blue light is always on and the machine is in standby state.

1) 433 remote control function:



Short circuit cap



A position where a short circuit cap can be plugged in.

S--learning: the short circuit cap is inserted into the S position of the double-way output pin mark point, and the blue light flashes and the machine is in learning state; Pressing the 433 remote control (buzzer rings) indicates that the learning information is successfully entered.

Note: the remote controller can input 30 users, if you want to enter the 31st user, the 31st user's information will be transferred to the first user, the first user's data will be invalid, and so on.


N--crawl : After the short circuit cap is inserted into the N position of the double output needle punctuation point, the blue light is always on. Press the remote controller button (green light, buzzer call) to unlock and reset automatically after 0.5s.

Note: in click mode, single key, double key remote control can be locked by any key, self-reset after 0.5s.

L—Self-locking: After the short-circuit cap is inserted in the L position of the two-way output pin point, press the remote control A

key(The buzzer sounds, the green light is on, it is always in the unlocked state)





control again, the buzzer rings, and the blue light is on and reset. Press the B key of the remote control again, the buzzer rings, and

the blue light is on and reset.



Note: In the self-locking mode, the single key remote control can only be unlocked and cannot be locked; the double bond remote control A key is unlocked, and the B key is reset.

D--Delete.: the short-circuit cap is inserted in the D position of the two-way output pin-and-pin punctuation, the blue light flashes, and the long-time sound is long after the five-sound, and the long-ringing state indicates that the remote controller data is deleted successfully.

2) Distance adjustment.



The induction distance can be adjusted by twisting the blue square potentiometer behind the circuit board, the range of which can be adjusted is 5×20 cm, the clockwise twisting is small, and the counterclockwise twisting is large.



